

Setup Diagram:



Quick start

1. Setup as above, ensuring all batteries are well charged. (Microphone kit supplied may vary)
2. Turn on the DVR by holding down the power button.
3. Scroll to the '4K AV Recorder' icon (centre) using the side toggle and then select it.
4. The image from the camera should now be visible on screen. To record press the record button.
5. To stop recording press the stop button.
6. Now press the mode button to go back to the main menu. Now scroll to the 'Video Player' icon and select.
7. Select the video you have just recorded and press play.

Video Quality

The default quality setting on the DVR is LP. To improve the quality of the video recorded, SP should be selected. To do this put the DVR into '4K AV Recorder' mode as above then press the Menu (Stop) button. Scroll to the 'Q' (Quality) option and select. Now scroll from LP to SP and press select. To get back to the main screen press the Mode button.

Microphone (included with Action Ready Package)

The free microphone included is supplied so that audio can be recorded onto the video. The microphone has been selected to work with the DVR when recording noisy engines and audio of a similar nature without it being distorted. Therefore the microphone may struggle to pick up some quiet sounds, for these we recommend our High Gain microphone.

4Kam Xtras

If you want to expand the capabilities of your 4Kam kit then consider these add-ons:

Camera	Cigar Power Cable - Various mounts – Booster Cable Extension – XPower Pack - Replacement lens glass –
DVR	Additional Memory Cards for up to 8 hours recording - Velcro Mounting Tape – Cigar Power Cable –
Microphone	High Gain Microphone (for cycling/snowboarding) - Stereo adapter – Extra microphone for real stereo sound –
Add-ons	Dual Camera Switches – Quattro Processor (up to 4 Cameras) -
Apparel	4Kam T Shirts, hoodies, hats and other merchandise plus a range of stickers and decals.