

DOMINATOR



There are a few things to consider when setting up the dominator camera depending on where your camera is positioned and the surrounding light levels. The camera can be configured accordingly and to do this there is a joystick on the rear of the camera hidden under the screw cap on the rear. Remove the screw cap and press the joystick once to bring up the menu system (as an overlay image on your monitor or DVR screen). Move the joystick accordingly to navigate the menu options.

As a start assuming the camera is set to default:

The two most important options are:

Exposure > D-WDR = INDOOR

This is usually required for an optimal 'in-car' image as the camera takes the view through the windscreen and the inside image and merges them together.

Exposure > Brightness = 5 to 45

This varies from car to car. Reduce the brightness as required until the image looks 'right'

Exposure > BLC = BLC

BLC is useful to cut down on glare.

There are many other settings on the camera but usually the following three are the only others you may wish to use:

3DNR = ON

This can be useful to reduce noise on the image to improve clarity

Special > D-Effect > Gamma = 0.5 to 1

Use this to change the colour saturation of the picture. 1 is the highest saturation, 0.5 is least.

Reset > Factory Reset

If you want to rest the camera to its default settings use this.

For any further advice please get in touch.